

User guide for a recliner with motorized headrest

1-Take the bag that contains the connecting items which you will find inside the back behind the furniture.



2-Install the back.



3-Raise the board. Plug the two wires together.




4-Cut the tie-wrap which holds the electrical wire together, located underneath the furniture.



User guide for a recliner with motorized headrest-next page

OPTION 1

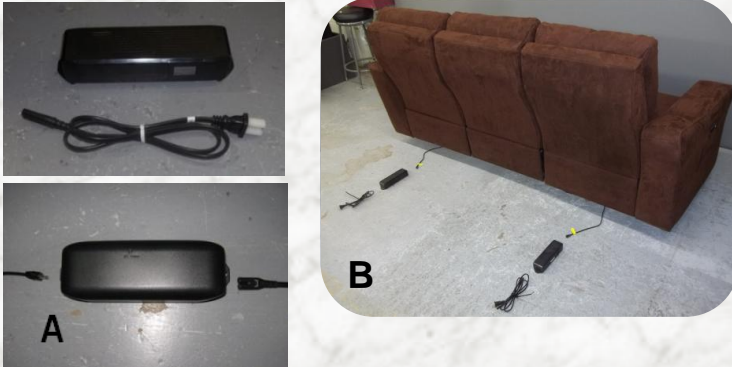

(A & B) Plug the wires to the transformer under the base (contained in the plastic bag inside the back of the furniture).

OPTION 2



Rechargeable battery

See sheet: Connection of a cordless power motorized furniture.


Note: For each seat/back with a motorized headrest, a kit including a transformer and an electric cable are provided.

For your safety

- *Do not try to close the footrest if someone or something is under it.
- *Do not try to get out of the recliner if the footrest is open.
- *Do not try to get out of the recliner if the footrest is open.
- *Do not try to get out of the recliner if the footrest is open.
- *Follow the instructions carefully and always plug into wall or in battery at the last step.

User guide for a recliner with motorized headrest-next page

OPTION A: Control button

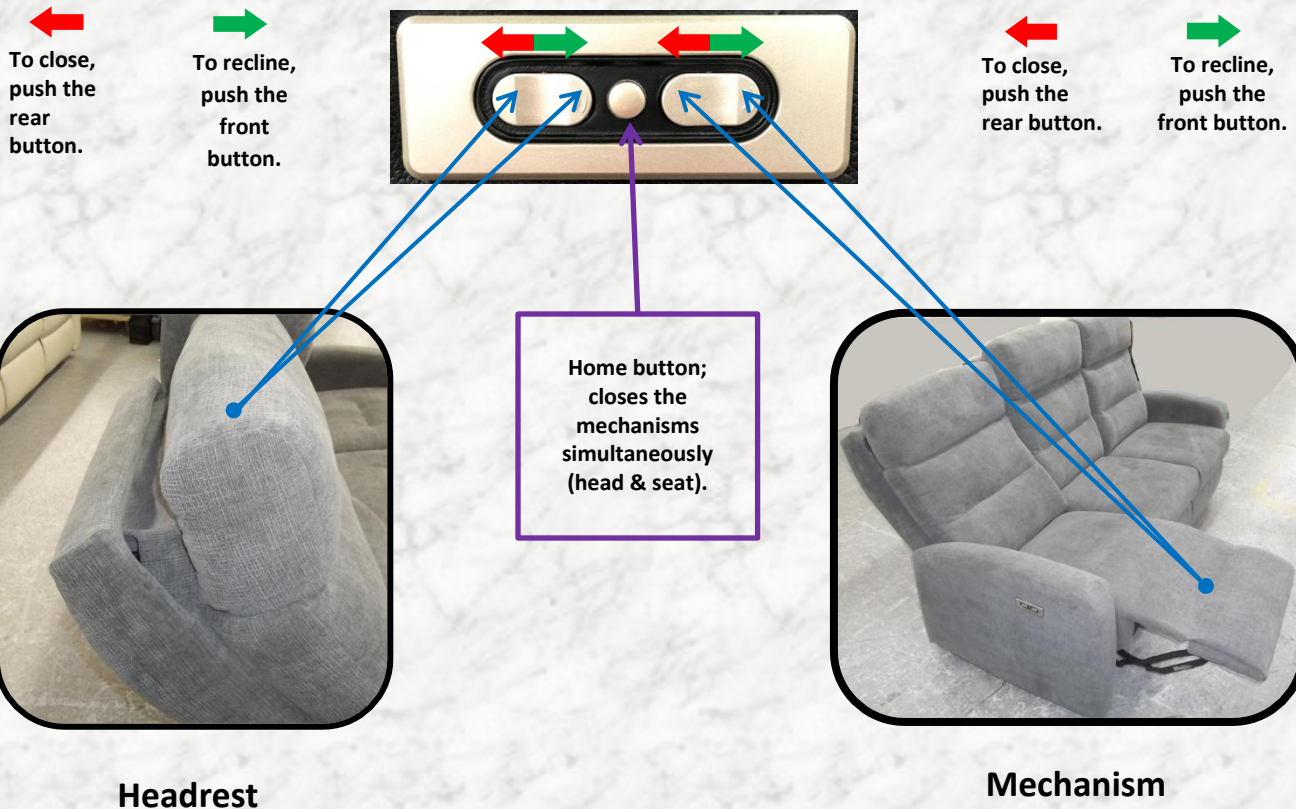

User guide for a recliner with motorized headrest-next page

OPTION B: Control button integrated into the side of the seat

(Available only with reclining center furniture).

