

User guide for a recliner with motorized headrest and lumbar support


1-Take the bag that contains the connecting items which you will find inside the back behind the furniture.



2-Install the back. Raise the board, and connect the back wires.



3-Back wire LONG > LUMBAR control wire
Back wire SHORT > HEAD control wire

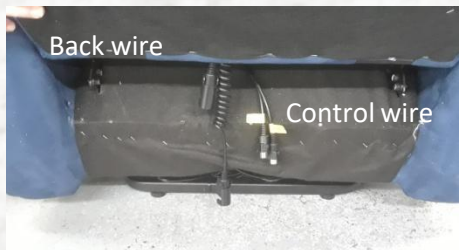


4-Cut the tie-wrap which holds the electrical wire located under the furniture.



User guide for a recliner with motorized headrest and lumbar support-next page

OPTION 1

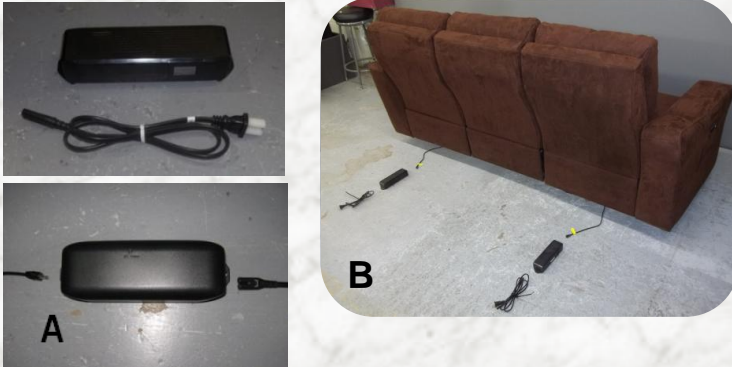

(A & B) Plug the wires to the transformer and under the base (contained in the plastic bag inside the back of the furniture).

OPTION 2



Rechargeable electric battery

See sheet: Connection of a cordless power motorized furniture.

Note: For each seat/back with a motorized headrest, a kit including a transformer and an electric cable are provided.


For your safety

- * Do not try to close the footrest if someone or something is under it.
- * Do not try to get out of the recliner if the footrest is open.
- * Do not try to get out of the recliner if the footrest is open.
- * Do not try to get out of the recliner if the footrest is open.
- * Follow the instructions carefully and always plug into wall or in battery at the last step.

User guide for a recliner with motorized headrest and lumbar support-next page

OPTION A: Control button

Home button;
closes the
mechanisms
simultaneously
(head & seat).

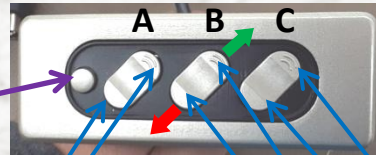


To close, push the
rear button.

To recline, push the
front button.



B-Lumbar

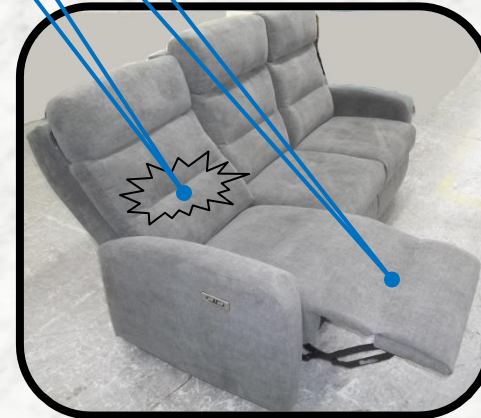

C-Mechanism

User guide for a recliner with motorized headrest and lumbar support-next page

OPTION B: Control button integrated into the side of the seat

(Available only with reclining center furniture).

