


Motorized recliner with controller or button control

1-Tip the chair towards the front.

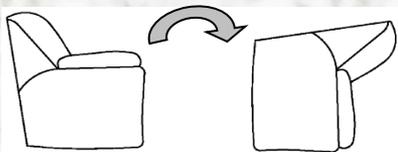

2-Cut the tie-wrap which holds the electrical wires located under the furniture.




3-Take the bag that contains the connecting items which you will find inside the back behind the furniture.

4-Plug according to the following drawings.


For your safety

- *Do not try to close the footrest if someone or something is under it.
- *Do not try to get out of the recliner if the footrest is open.
- *Do not let children use the recliner without supervision.
- *Unplug the transformer when the furniture is not in use.
- *Keep dry. Do not operate in a wet or moist environment.

OPTION 1

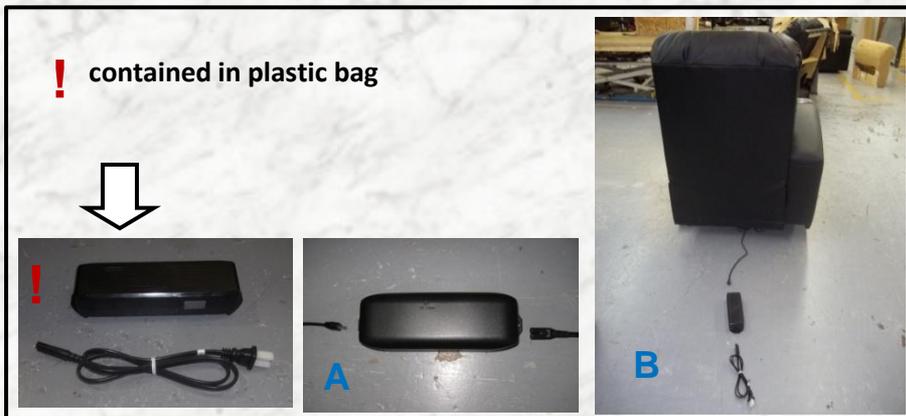

OPTION 2

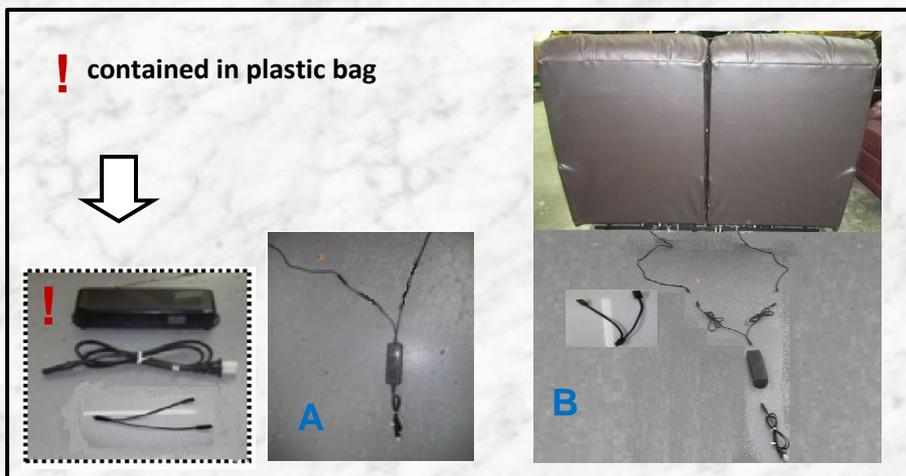


(A & B) Plug the wires to the transformer and under the base (contained in the plastic bag inside the back of the furniture).

Motorized recliner with controller or button control-next page

Control type

*Control options are specific to certain models


Option A Control button

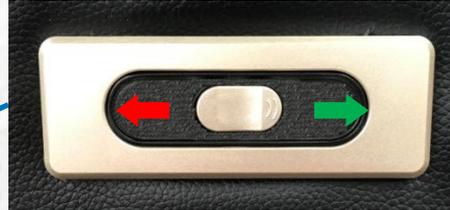

To close, push the back button.

To recline, push the front button.

Option B Control button integrated into the side of the seat

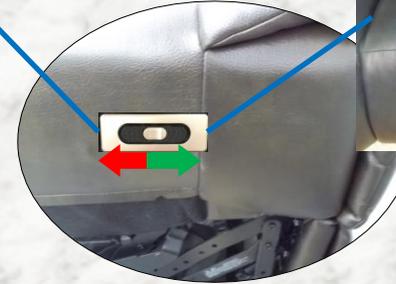

Note

The control buttons are located on the left of the seat cushion (on your right if you are sitting on the furniture).

Option C Controller

To close, push the bottom button.



To recline, push the top button.

