


User guide for motorized recliners with lighting system - HTC

1-Tip the chair towards the front.

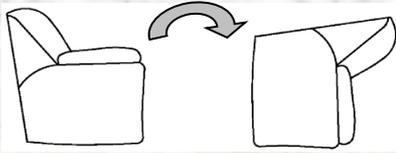

2-Cut the tie-wrap which hold the electrical wires located under the furniture.



3-Take the bag that contains the connecting items which you will find inside the back behind the furniture.

4-You are ready to connect the wire.


For your safety

- *Do not try to close the footrest if someone or something is under it.
- *Do not try to get out of the recliner if the footrest is open.
- *Do not let children use the recliner without supervision.
- *Unplug the transformer when the furniture is not in use.
- *Keep dry, do not operate in a wet or moist environment.

OPTION 1




OPTION 2

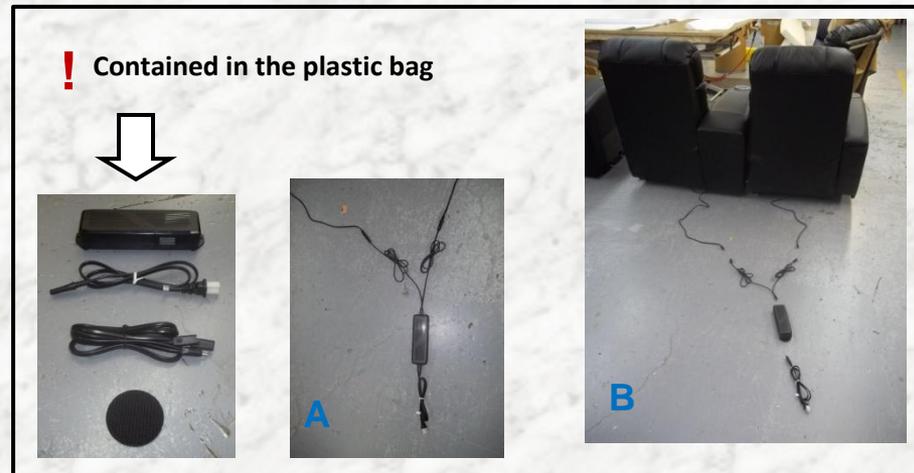

(A & B) Connect the wires to the transformer and pass them under the base (contained in the plastic bag inside the back of the cabinet).

User guide for motorized recliners with lighting system – HTC – next page

Using the system

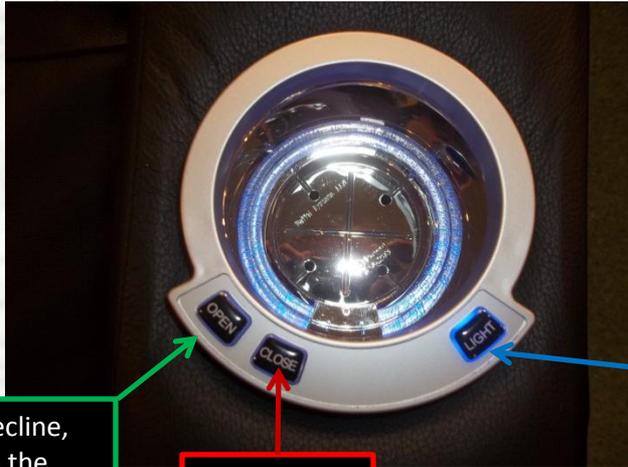

To recline, push the "open" button.

To close, push the "close" button.

To use the lighting system, push the "light" button to turn on and turn off.

Remarques sur l'utilisation:

*Lighting of the control buttons on the cupholder will turn off after 30 seconds.

*Lights stop automatically after 2 hours of operation (cupholder & strip under the foot-stool).

Insert the round rubber into the cup holder (contained in the plastic bag).

